# Halo Kit Installation Guide

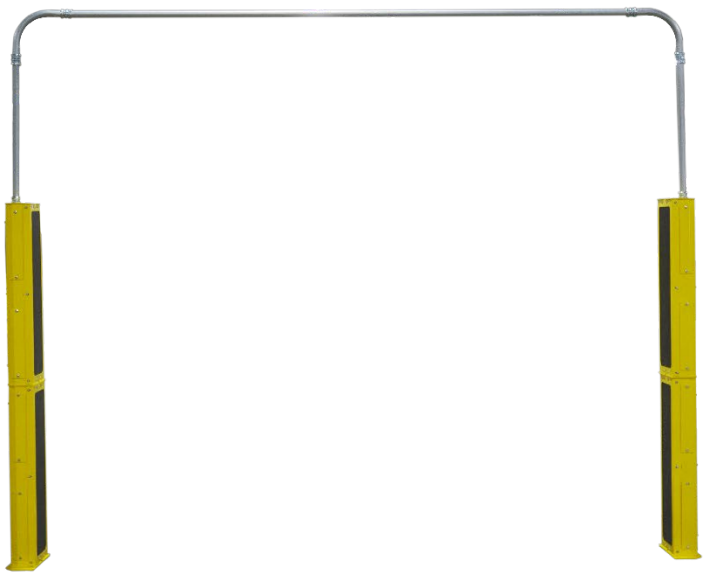

## Included Hardware:

- (5) 5’ sections of 1-1/4” conduit
- (2) 30” sections of 1-1/4” conduit
- (2) 90° elbow 1-1/4” conduit
- (6) Compression couplings 1-1/4" conduit
- (2) Compression connectors 1 1/4” conduit

## Recommended Tools:

- (2) Channellock pliers
- (1) 3/8” wrench

## Step 1:

- Run the cables through the conduit and couplings
- Connect the compression couplings to the conduit with Channellock pliers

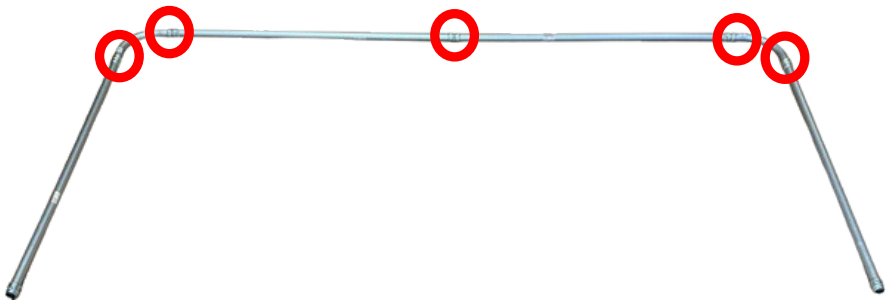

## Step 2:

- Ensure that the Industrial Portals are securely fastened to the floor
- Remove the (6) ¼”-20 ½” long screws from the quick access panel with a 3/8” wrench to connect the cables between the antennas and reader

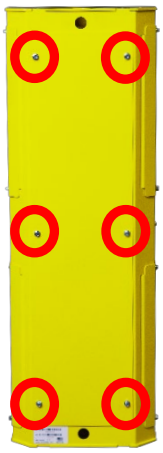

## Step 3:
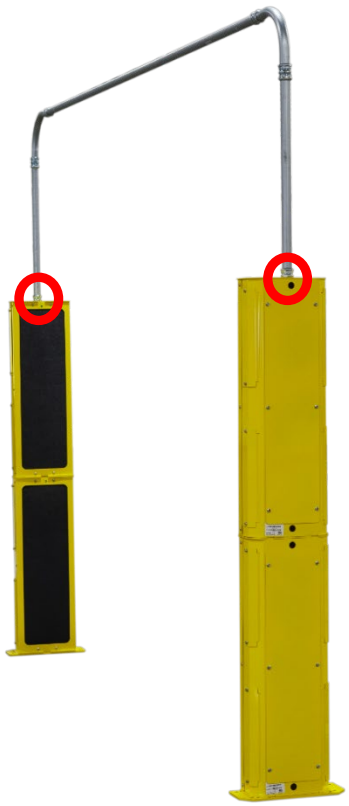
- Lift the conduit into place while the quick access panel is still removed, and secure it to the Industrial Portals using the compression connectors
- Reattach the quick access panel to Industrial Portals