U-Bolt Mount Installation Guide

Included Hardware:

- (2) U-bolt pole mounts
    - (4) U-bolt nuts
    - (4) U-bolt washers
- (8) 7/8” length 3/8”-16 hex screws
- (16) 3/8” flat washers
- (8) 3/8” locknuts

Recommended Tools:

- 9/16” Socket driver and box wrench
- 3/8” Socket driver or box wrench

Step 1:

- Remove the back panel from Industrial Portal with 3/8” wrench
- Align the U-bolt mount installation holes over the Industrial Portal

Step 2:

- Install the (4) 7/8” long 3/8”- 16 screws with washers as shown with a 9/16” socket driver and wrench

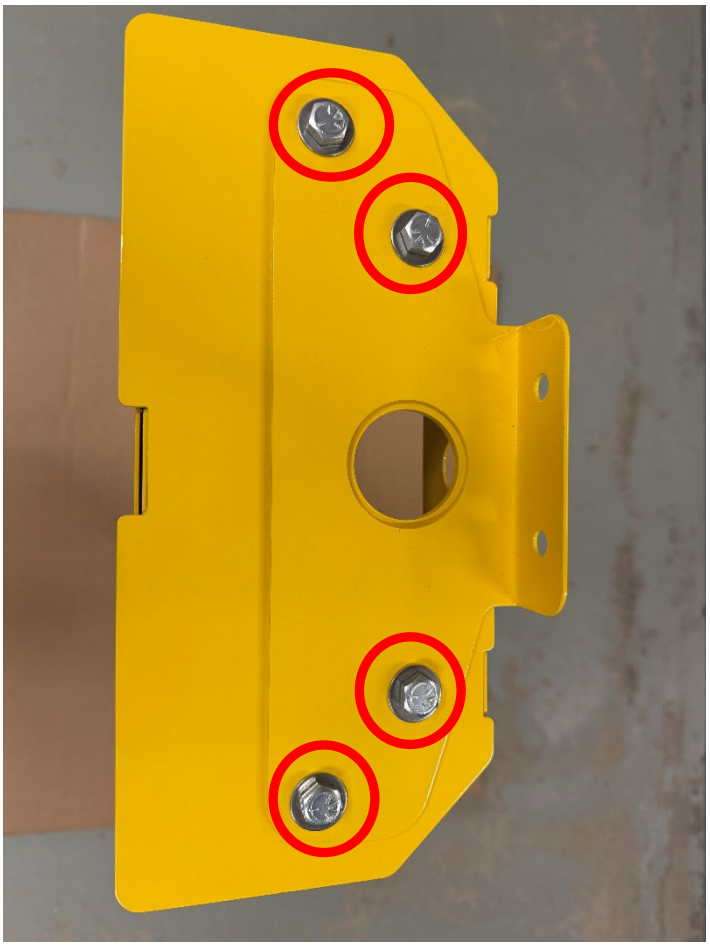

Step 3:

- Install the (4) 3/8” washers and hex nuts as shown

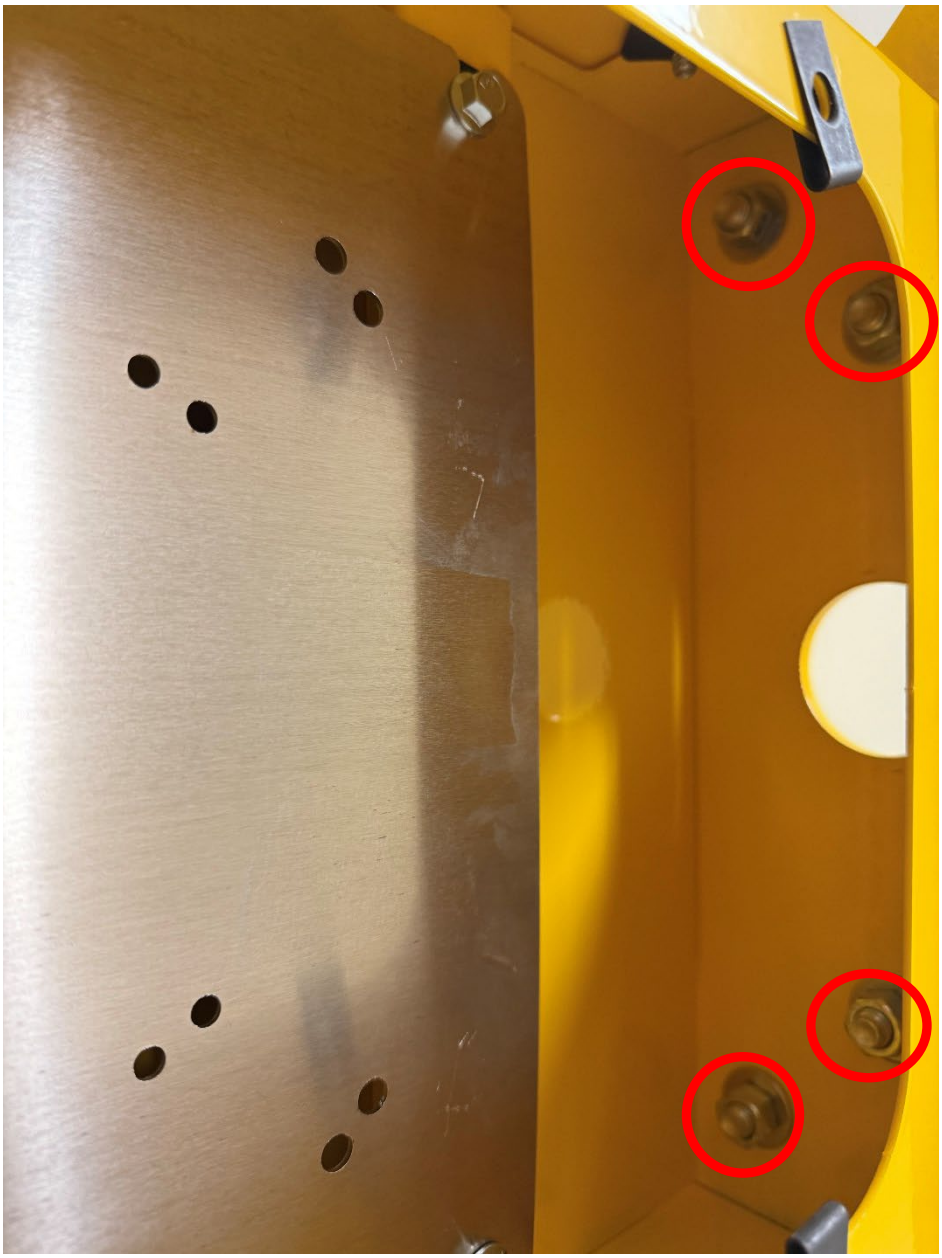

Step 4:

- Repeat steps 1-3 at the opposite end of the Industrial Portal to install the other U-bolt bracket